



Instruction For Use

JA-10 Fixed Angle Rotor

Used in Beckman Coulter J2, J6, and Avanti J Series Centrifuges



J-TB-006BC
March 2022



Beckman Coulter, Inc.
250 S. Kraemer Blvd.
Brea, CA 92821 U.S.A.



JA-10 Fixed Angle Rotor Instructions For Use

PN J-TB-006BC (March 2022)

© 2022 Beckman Coulter, Inc.
All rights reserved.

Beckman Coulter, the stylized logo, and the Beckman Coulter product and service marks mentioned herein, including Biomek and Biomek NGenius, are trademarks or registered trademarks of Beckman Coulter, Inc. in the United States and other countries.

All other trademarks, service marks, products, or services are trademarks or registered trademarks of their respective holders.

Contact Us

If you have any questions, contact our Customer Support Center.

- Worldwide, find us via our website at www.beckman.com/support/technical
- In the USA and Canada, call us at 1-800-369-0333.
- In Austria, call us at 0810 300484
- In Germany, call us at 02151 333999
- In Sweden, call us at +46 (0)8 564 859 14
- In the Netherlands, call us at +31 348 799 815
- In France, call us at 0825838306 6
- In the UK, call us at +44 845 600 1345
- In Ireland, call us at +353 (01) 4073082
- In Italy, call us at +39 0295392 456
- In other locales, contact your local Beckman Coulter Representative.

EC REP

Beckman Coulter Eurocenter S.A.
22, rue Juste-Olivier
Case Postale 1044
CH - 1260 Nyon 1, Switzerland
Tel: +41 (0) 22 365 36 11

*May be covered by one or more pat. - see
www.beckman.com/patents*

Glossary of Symbols is available at
beckman.com/techdocs (PN C24689).

Original Instructions

Revision History

For labeling updates, go to www.beckman.com/techdocs and download the latest version of the manual or system help for your instrument.

Issue J-TB-006BB, 02/2014

Issue J-TB-006BC, 04/2022

Changes were made to: Manual is reformatted; *Description*; *Maintenance*.

Note: Changes or additions that are part of the most recent revision are indicated in text by a bar in the margin of the amended page.

Safety Notice

Read all product manuals and consult with Beckman Coulter-trained personnel before attempting to operate instrument. Do not attempt to perform any procedure before carefully reading all instructions. Always follow product labeling and manufacturer's recommendations. If in doubt as to how to proceed in any situation, contact your Beckman Coulter Representative.

Alerts for Danger, Warning, Caution, Important, and Note



WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

IMPORTANT IMPORTANT is used for comments that add value to the step or procedure being performed. Following the advice in the Important adds benefit to the performance of a piece of equipment or to a process.

NOTE NOTE is used to call attention to notable information that should be followed during installation, use, or servicing of this equipment.

Safety Messages



This safety notice summarizes information basic to the safe use of the rotor described in this manual. The international symbol displayed above is a reminder to the user that all safety instructions should be read and understood before operation or maintenance of this equipment is attempted. When you see the symbol on other pages throughout this publication, pay special attention to the specific safety information presented. Observance of safety precautions will also help to avoid actions that could damage or adversely affect the performance of the rotor. This rotor was developed, manufactured, and tested for safety and reliability as part of a Beckman Coulter centrifuge/rotor system. Its safety or reliability cannot be assured if used in a centrifuge not of

Beckman Coulter's manufacture or in a Beckman Coulter centrifuge that has been modified without Beckman Coulter's approval.

 **WARNING**

Normal operation of the instrument may involve the use of solutions and samples that are toxic, flammable, or otherwise biologically harmful. When using such materials, observe the following precautions:

- Observe all cautionary information printed on the original solutions' containers prior to their use.
- Handle body fluids with care because they can transmit disease. No known test offers complete assurance that they are free of micro-organisms. Some of the most virulent—Hepatitis (B and C) and HIV (I-V) viruses, atypical mycobacteria, and certain systemic fungi—further emphasize the need for aerosol protection. Handle other infectious samples according to good laboratory procedures and methods to prevent spread of disease. Because spills may generate aerosols, observe proper safety precautions for aerosol containment.
- Dispose of all waste solutions according to appropriate environmental health and safety guidelines, and your facility's waste disposal procedures.
- Operate the instrument in accordance with the instructions outlined in the Instructions For Use and take all the necessary precautions when using pathological or toxic materials.
- Splashing of liquids may occur; therefore, take appropriate safety precautions, such as using safety glasses and wearing protective gloves and clothing, when working with potentially hazardous liquids.
- Biosafe containment should be used when Risk Group II materials (as identified in the World Health Organization *Laboratory Biosafety Manual*) are handled; materials of a higher group require more than one level of protection.
- Observe the appropriate cautionary procedures as defined by your safety officer when using flammable solvents in or near a powered-up instrument.
- Observe the appropriate cautionary procedures as defined by your safety officer when handling or using toxic or pathological materials.

 **CAUTION**

The rotor and accessories are not designed for use with materials capable of developing flammable or explosive vapors. Do not centrifuge such materials in nor handle or store them near the centrifuge.

 **CAUTION**

Although rotor components and accessories made by other manufacturers may fit in the JA-10 rotor, their safety in this rotor cannot be ascertained by Beckman Coulter. Use of other manufacturers' components or accessories in the JA-10 rotor may void the rotor warranty and should be prohibited by your laboratory safety officer. Only the components and accessories listed in this publication should be used in this rotor.

 **CAUTION**

Do not run an empty rotor. Place filled tubes in at least two opposing cavities. Make sure that filled containers are loaded symmetrically into the rotor and that opposing tubes are filled to the same level with liquid of the same density.

 **CAUTION**

If disassembly reveals evidence of leakage, you should assume that some fluid escaped the rotor. Apply appropriate decontamination procedures to the centrifuge and accessories.

 **CAUTION**

Never exceed the maximum rated speed of the rotor and labware in use. Refer to the section on RUN SPEEDS.

 **CAUTION**

Do not use sharp tools on the rotor that could cause scratches in the rotor surface. Corrosion begins in scratches and may open fissures in the rotor with continued use.

Contents

Revision History, iii

Safety Notice, v

Alerts for Danger, Warning, Caution, Important, and Note, v

Safety Messages, v

JA-10 Fixed Angle Rotor, 1

Specifications, 1

Description, 2

Preparation and Use, 3

Prerun Safety Checks, 3

Rotor Preparation, 3

Tubes and Bottles, 4

Temperature Limits, 4

Thickwall Tubes, 4

Polycarbonate and Polypropylene Bottles, 6

Operation, 6

Installing the Rotor, 7

Removal and Sample Recovery, 9

Temperature, 9

Avanti J Series Centrifuges, 9

Microprocessor-Controlled J2 and J6 Series Centrifuges (Models
J2-MI, J6-MI, J2-MC, and J6-MC), 10

Analog J2 Series Centrifuges, 11

Run Times, 11

Run Speeds, 12

Care and Maintenance, 14

Maintenance, 14

Cleaning, 15

Decontamination, 16

Sterilization and Disinfection, 16

Storage, 17

Returning a Rotor, 17

Supply List, 18

Replacement Rotor Parts, 18

Other, 18

J Series Rotor Warranty

Conditions, 1

Disclaimer, 1

Illustrations

- 1 Arrange Tubes or Bottles in the Rotor. Two, three, four, or six tubes or bottles can be run, if they are arranged symmetrically in the rotor, as shown, 4
- 2 Rotor Drive Pin Location and Orientation, 7
- 3 Centrifuge Drive Spindle Hub Configurations, 8
- 4 Installing the Rotor, 8

Tables

- 1 Specifications, 1
- 2 Available Tubes and Bottles for the JA-10 Fixed Angle Rotor.
Use only the items listed here and observe fill volumes and
maximum run speeds., 5
- 3 Temperature Compensation Settings for J2 and J6 Series
Centrifuges. Interpolate if intermediate values are
required, 11
- 4 Relative Centrifugal Fields for the JA-10 Rotor:
Entries in this table are calculated from the formula
 $RCF = 1.12r (RPM/1000)^2$, 13

|

JA-10 Fixed Angle Rotor


Specifications

Table 1 Specifications

	Maximum speed.....	10 000 rpm
	Critical speed range ^a	600 to 800 rpm
	Maximum solution density.....	1.2 g/mL
	Maximum allowable imbalance of opposing loads	10 grams
	Relative Centrifugal Field ^b at maximum speed	
	At r _{max} (158 mm)	17 700 × g
	At r _{av} (98 mm).....	11 000 × g
	At r _{min} (38 mm)	4 260 × g
	k factor at maximum speed.....	3610
	Number of bottle cavities	6
	Available bottles and tubes	see Table 1
	Nominal dimensions of largest bottle.....	69 × 160 mm
	Nominal bottle capacity	500 mL
	Nominal rotor capacity	3 liters
	Approximate acceleration time to maximum speed (rotor fully loaded) 4 1/2 min	
	Approximate deceleration time from maximum speed (rotor fully loaded, max. brake).....	5 min
	Weight of fully loaded rotor	22 kg (48 lb)
Rotor material	aluminum	
Conditions requiring speed reduction	see Run Speeds	
Rotor entry code for Avanti J-E and microprocessor- controlled J2 and J6 centrifuges.....	10	

- a. The critical speed range is the range of speeds over which the rotor shifts so as to rotate about its center of mass. Passing through the critical speed range is characterized by some vibration.
- b. Relative Centrifugal Field (RCF) is the ratio of the centrifugal acceleration at a specified radius and speed ($r\omega^2$) to the standard acceleration of gravity (g) according to the following formula: $RCF = r\omega^2/g$, where r is the radius in millimeters, ω is the angular velocity in radians per second ($2\pi \text{ RPM}/60$), and g is the standard acceleration of gravity (9807 mm/s^2). After substitution: $RCF = 1.12r(\text{RPM}/1000)^2$.

Description

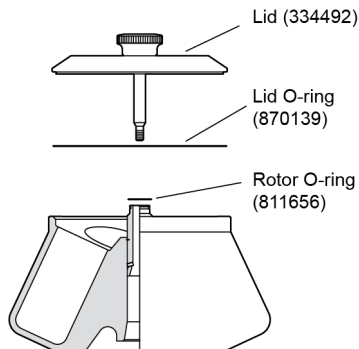

This rotor has been manufactured in a registered ISO 9001 or 13485 facility for use with the specified Beckman Coulter centrifuges.

The JA-10 fixed angle rotor, rated for 10 000 rpm, is designed to centrifuge up to six 500-mL containers at a 25-degree angle to the axis of rotation. Used in Beckman Coulter J2, J6, and Avanti J series centrifuges,* the rotor develops centrifugal forces that can efficiently pellet bacterial cells from large volumes, or particles from tissue homogenates. Up to 3 liters of sample and gradient can be centrifuged per run.

The rotor body and lid are made of aluminum and are anodized for corrosion resistance—the rotor is black and the lid is blue. The lid knob secures the rotor to the drive hub.

O-rings made of Buna N rubber in the lid and rotor body maintain atmospheric pressure inside the rotor during centrifugation, if they are properly lubricated. Pins in the rotor drive hole mate with grooves in the centrifuge drive hub (older model centrifuges), or with drive hub teeth (new model centrifuges), to prevent the rotor from slipping during acceleration and deceleration.

Starting in 2002, JA-10 rotors are manufactured with magnets embedded in the rotor base for rotor identification in the Avanti J-E centrifuge. Older JA-10 rotors without magnets can be used in the Avanti J-E, but the rotor speed will be limited to 6300 rpm. (Other Avanti J series and J2 series centrifuges use alternate methods of rotor identification that enable the rotor to run up to 10 000 rpm.)

The JA-10 rotor is warranted for 7 years (see the [J Series Rotor Warranty](#)).

* Newer JA-10 rotors with magnets, p/n 369687, cannot be used in J2 or J6 series centrifuges. Older JA-10 rotors without magnets, p/n 334833, can be used in J2 and J6 series centrifuges.

Preparation and Use

Specific information about the JA-10 rotor is given here. Use the J Series Rotors and Tubes manual (JR-IM-10) along with this rotor manual for complete rotor and accessory operation.

NOTE Although rotor components and accessories made by other manufacturers may fit in the JA-10 rotor, their safety in this rotor cannot be ascertained by Beckman Coulter. Use of other manufacturers' components or accessories in this rotor may void the rotor warranty and should be prohibited by your laboratory safety officer. Only the components and accessories listed in this publication should be used in this rotor.


Prerun Safety Checks



Read the [Safety Notice](#) at the front of this manual before using the rotor.

- 1 Make sure that the rotor and lid are clean and show no signs of corrosion or cracking.
- 2 Check the chemical compatibilities of all materials used (refer to Appendix A in *Rotors and Tubes* [PN JR-IM-10]).
- 3 Verify that the tubes and bottles being used are listed in [Table 2, Available Tubes and Bottles for the JA-10 Fixed Angle Rotor](#). Use only the items listed here and observe fill volumes and maximum run speeds..

Rotor Preparation

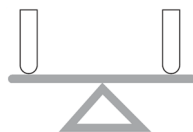


For runs at other than room temperature, refrigerate or warm the rotor beforehand for fast temperature equilibration.

- 1 Apply a thin film of silicone vacuum grease (335148) to the O-rings.

- 2 Load the filled containers symmetrically into the rotor. (Refer to [Tubes and Bottles](#) for information about containers.) If fewer than six tubes are being run, they must be arranged symmetrically in the rotor (see [Figure 1](#)). Opposing tubes must be filled to the same level with liquid of the same density (within 10 grams).

Figure 1 Arrange Tubes or Bottles in the Rotor. Two, three, four, or six tubes or bottles can be run, if they are arranged symmetrically in the rotor, as shown

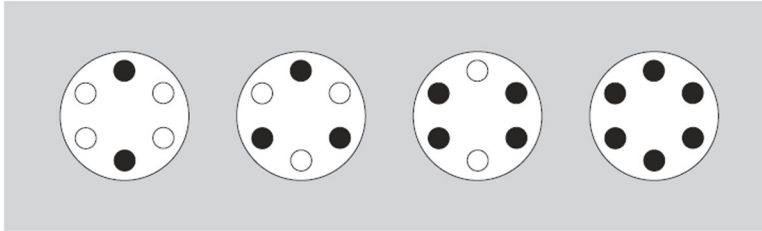

Tubes and Bottles

The JA-10 rotor uses the tubes and bottles listed in Table 1. Use only those items listed, and observe the maximum speed limits and fill volumes shown. (Maximum fill volume is the maximum amount that can be centrifuged in the container listed.) Refer to Appendix A in Rotors and Tubes (PN JR-IM-10) for chemical compatibilities of tube, bottle, and accessory materials.

Temperature Limits



- Plastic containers have been centrifuge tested for use at temperatures between 2 and 25°C. For centrifugation at other temperatures, pretest tubes under anticipated run conditions.
- If plastic containers are frozen before use, make sure that they are thawed to at least 2°C prior to centrifugation.

Thickwall Tubes



Thickwall polypropylene and polycarbonate tubes can be run partially filled (at least half filled) with or without caps, but all opposing tubes for a run must be filled to the same level with liquid of the same density. Do not overfill capless tubes; be sure to note the fill volumes and run speeds shown in [Table 2](#).

Table 2 Available Tubes and Bottles for the JA-10 Fixed Angle Rotor.
Use only the items listed here and observe fill volumes and maximum run speeds.

Tube			Max Fill Vol. ^a (mL)	Required Accessory		Max No. Tubes per Adapter	Max Speed ^b RCF
Dimensions and Volume	Description	Part Number		Description	Part Number		
69 × 160 mm 500 mL	polycarbonate bottle w/cap assy	355605	465	none	—	—	10 000 rpm 17 700 × g
69 × 160 mm 500 mL	polypropylene bottle w/cap assy	355607	445	none	—	—	8 000 rpm 11 300 × g
62 × 120 mm 250 mL	polypropylene wide mouth bottle w/cap assy	356011	250	adapter, PET ^c	362750	1	10 000 rpm 17 700 × g
62 × 120 mm 250 mL	polycarbonate wide mouth bottle w/cap assy	356013	250	adapter, PET ^c	362750	1	10 000 rpm 17 700 × g
29 × 104 mm 50 mL	polycarbonate bottle assy w/liquid-tight cap assy	357000	45	adapter, polypropylene	356996	1	10 000 rpm 12 000 × g
29 × 104 mm 50 mL	polypropylene bottle assy w/liquid-tight cap assy	357001	45	adapter, polypropylene	356996	1	10 000 rpm 12 000 × g
29 × 104 mm 50 mL	polycarbonate bottle w/screw cap	357002	40	adapter, polypropylene	356996	1	10 000 rpm 12 000 × g
29 × 104 mm 50 mL	polypropylene bottle w/screw cap	357003	40	adapter, polypropylene	356996	1	10 000 rpm 12 000 × g
29 × 104 mm 50 mL	polypropylene thickwall tube w/snap-on cap	357005	36.5	adapter, polypropylene	356996	1	10 000 rpm 12 000 × g
				natural 29-mm cap red 29-mm cap green 29-mm cap yellow 29-mm cap blue 29-mm cap	356264 ^d 357359 ^d 357360 ^d 357361 ^d 357362 ^d	--	
29 × 104 mm 50 mL	polypropylene thickwall tube, no cap	357007	50	adapter, polypropylene	356996	1	10 000 rpm 12 000 × g
29 × 104 mm 50 mL	polycarbonate open-top tube	363647	40	adapter, polypropylene	356996	1	10 000 rpm 12 000 × g

Table 2 Available Tubes and Bottles for the JA-10 Fixed Angle Rotor.

Use only the items listed here and observe fill volumes and maximum run speeds. (Continued)

Tube			Max Fill Vol. ^a (mL)	Required Accessory		Max No. Tubes per Adapter	Max Speed ^b RCF
Dimensions and Volume	Description	Part Number		Description	Part Number		
29 × 104 mm 50 mL	polycarbonate tube w/snap-on cap	363664	40	adapter, polypropylene	356996	1	10 000 rpm 12 000 × g
29 × 115 mm 50 mL	conical tube	e	e	adapter, polypropylene	356965	1	10 000 rpm 12 000 × g
17 × 120 mm 15 mL	conical tube	e	e	adapter, polypropylene	356960	5	6 500 rpm 7 000 × g
17 × 120 mm 15 mL	round-bottom tube	e	e	adapter, polypropylene	356994	5	10 000 rpm 12 000 × g
13 × 100 mm 7 mL	round-bottom tube	e	e	adapter, Delrine ^f	356973		10 000 12 000 × g
12 × 75 mm 4 mL	round-bottom tube	e	e	adapter, Delrine ^f	356967		10 000 12 000 × g
Bio-Vials 14 × 55 mm 4 mL	polypropylene, capped	566353	4	adapter, Delrine ^f	342098	9	10 000 rpm
				adapter, PET ^c	362750	1	

- Above 20°C fill polypropylene tubes at least half full.
- Maximum speeds listed are guidelines only. These speeds have been achieved in reliability tests at Beckman Coulter, but, because of manufacturing variances, no guarantee of performance or fit is expressed or implied.
- Polyethylene terephthalate.
- Polypropylene; package of 25.
- Commercially available. Observe manufacturer's speed and fill volume guidelines.
- Delrin is a registered trademark of E.I. Du Pont de Nemours & Company.



Polycarbonate and Polypropylene Bottles

Capped polycarbonate and polypropylene bottles may be run completely filled, or partially filled (not less than half full). All opposing containers for a run must be filled to the same level

Operation

ROTOR ID

JA-10

- Precool the rotor in the centrifuge or in a refrigerator before use — especially before short runs — to ensure that the rotor reaches the set temperature. A suggested precooling cycle is a minimum of 30 minutes at 2000 rpm at the required temperature.


- If fluid containment is required, *use capped tubes or bottles*. It is strongly recommended that all containers carrying physiological fluids be capped to prevent leakage.
- *J2 and J6 series centrifuges only*. Apply a thin film of Spinkote lubricant (306812) to the centrifuge drive hub and to the metal threads on the lid knob.
- If you are using an Avanti J series centrifuge (except Avanti J-E), select the JA-10 rotor.
- If you are using an Avanti J-E or a microprocessor-controlled J2 or J6 series centrifuge, enter rotor code **10**.

Installing the Rotor

Lubricate J2 and J6 series centrifuge drive hubs with a thin, even coat of Spinkote (396812) to prevent the rotor from sticking. Avanti J series centrifuge hubs have Delrin* rings to prevent rotor sticking, and do not require lubrication.


Two metal pins inside the rotor drive hole engage with teeth on the centrifuge drive spindle hub to prevent the rotor from slipping during acceleration and deceleration (see [Figure 2](#)). When the rotor is properly installed, the pins sit either in the drive hub grooves or on top of the hub surface (see [Figure 3](#)).

Figure 2 Rotor Drive Pin Location and Orientation

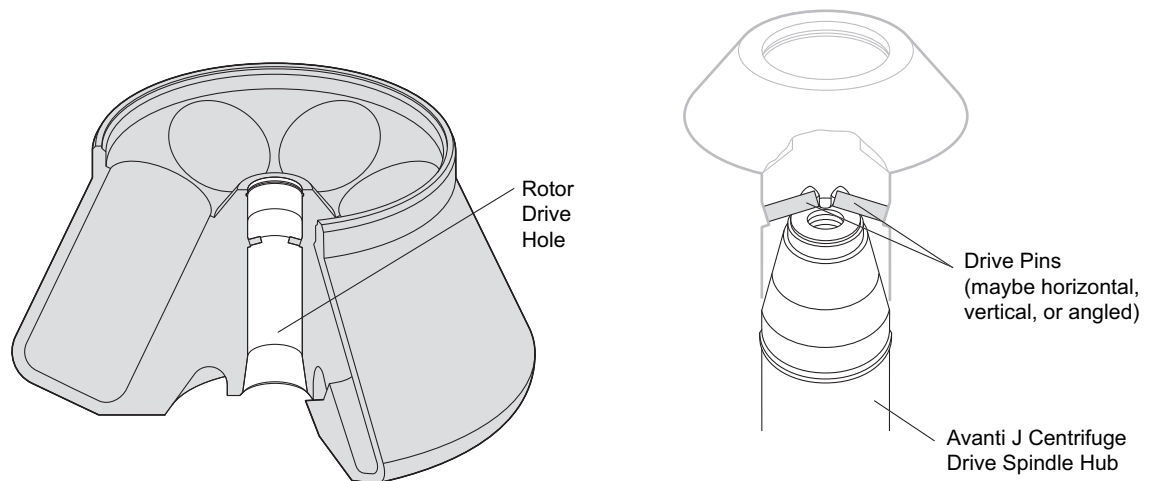


* Delrin is a registered trademark of E.I. Du Pont de Nemours & Company.

Figure 3 Centrifuge Drive Spindle Hub Configurations

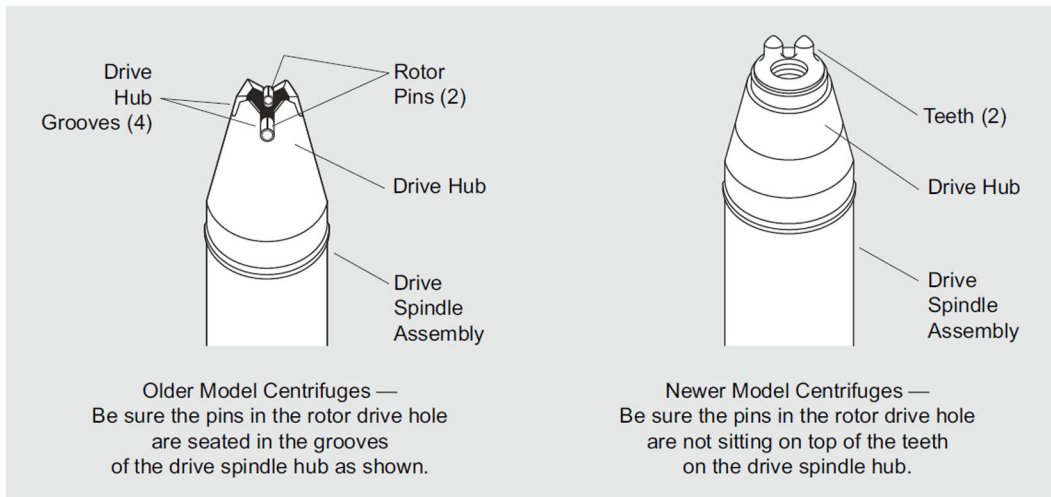

The rotor pins are positioned parallel to the **BECKMAN** name engraved at the center of the rotor body (see [Figure 4](#)). Knowing the pin orientation before you install the rotor will help to ensure that you position the rotor properly on the hub, minimizing the chance of hub damage. Follow the steps below.

Figure 4 Installing the Rotor

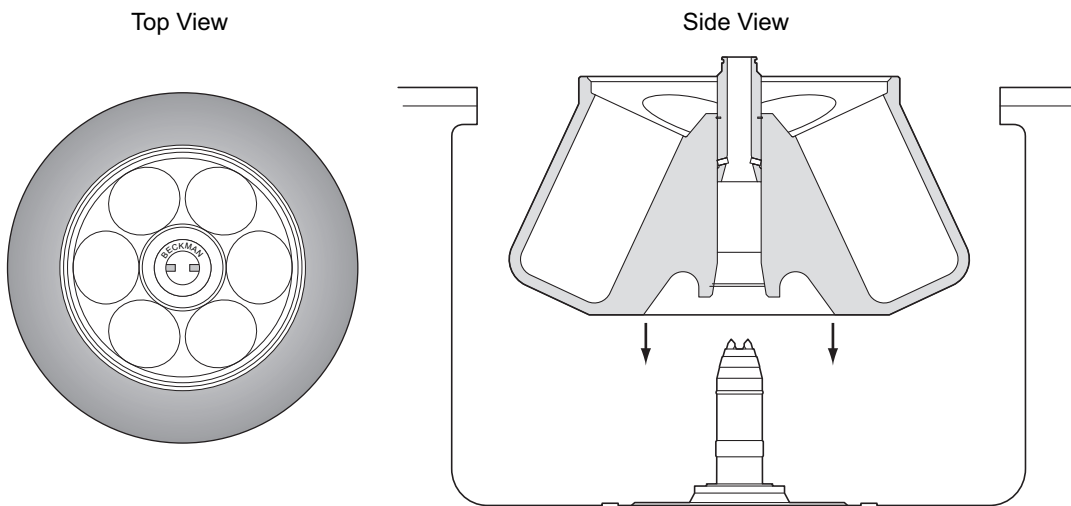

- 1 Turn the rotor until the **BECKMAN** name is either horizontal or perpendicular to the drive hub pins or teeth (see [Figure 4](#)). Alternately, rotate the drive spindle to align the hub pins or teeth with the rotor drive pins.
- 2 Carefully lower the rotor straight down onto the centrifuge drive spindle hub. *Do not drop the rotor onto the hub.*

- 3 Slowly turn the rotor, making sure that it is properly seated on the drive spindle hub. (In rare cases, the rotor pins can rest on top of the hub pins or teeth and not seat on the hub surface. This can prevent the rotor from being secured to the drive spindle. Turning the rotor slightly after installing it will move the pins into proper position.)
- 4 To secure the rotor to the drive spindle, place the lid on the rotor and turn the lid knob to the right (clockwise) until secure. Do not overtighten.


Removal and Sample Recovery

 **CAUTION**

 If disassembly reveals evidence of leakage, you should assume that some fluid escaped the rotor. Apply appropriate decontamination procedures to the centrifuge and accessories

- 1 Unscrew the rotor lid to release the rotor from the spindle hub.
- 2 Remove the rotor by lifting it straight up and off the drive spindle. If the rotor sticks to the drive spindle hub, use the rotor removal tool (334827) to release the rotor as follows.
 - a. Screw the threaded end of the rotor removal tool into the rotor drive hole.
 - b. When the removal tool contacts the drive spindle hub, continue turning the removal tool until the rotor releases.
 - c. Unscrew and remove the removal tool from the rotor. The rotor should now lift easily off of the drive spindle hub.

Temperature

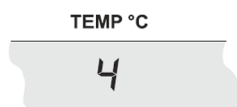

To ensure that the JA-10 rotor reaches the required temperature during the run, follow the appropriate instructions below for the model of J centrifuge being used

Avanti J Series Centrifuges

Enter the run temperature according to the instructions in your centrifuge instruction manual. No additional input is required.


Microprocessor-Controlled J2 and J6 Series Centrifuges (Models J2-MI, J6-MI, J2-MC, and J6-MC)

Enter rotor code **10**, then follow the steps below.

- 1** Press the **[TEMP]** key on the centrifuge control panel and then use the keypad to enter the sample temperature.
- 2** Find the compensation value in [Table 3](#) that corresponds with the set temperature and run speed. The compensation values listed in Table 2 are approximates for all centrifuge models. If precise temperature control is required, determine the compensation settings empirically as follows:
 - a.** Fill the rotor with water-filled tubes or bottles. Precool the rotor and water to the required temperature.
 - b.** Place the filled, precooled rotor in the centrifuge and run the system for at least 1/2 hour.
 - c.** Measure the water temperature. If it is lower than the required run temperature, enter positive compensation units during run setup following steps [3](#) and [4](#) below. If it is higher than the required run temperature, enter negative compensation units during run setup, also using steps [3](#) and [4](#), below.
 - d.** Discard the water. Fill tubes with sample, load tubes into the rotor, and precool the system to the required temperature before starting the run.
- 3** Press **[COMP ADJ]**. The word “COMP” flashes below the TEMPERATURE display and the display flashes.
- 4** Use the keypad to enter the desired compensation value. Press the **[± .]** key to enter a minus sign; pressing it again will remove the minus sign.
- 5** Check the temperature display. (If the entry is incorrect, press **[CE]** and reenter the digits.)
- 6** When the entry is correct, press **[ENTER/RECALL]**.

NOTE To clear a COMP ADJ entry, press **[COMP ADJ]**, **[0]**, and **[ENTER/RECALL]**.

Analog J2 Series Centrifuges

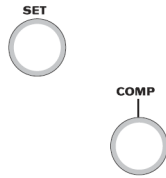

Enter the required run temperature and the appropriate temperature compensation units (see [Table 3](#)) on the centrifuge control panel as follows.


- 1 Turn the **SET** knob to the required sample temperature.
- 2 Find the compensation value that corresponds to the required temperature and run speed. The compensation values listed in [Table 3](#) are approximate for all centrifuge models. If precise temperature control is required, follow the steps in *Microprocessor-Controlled J2 and J6 Series Centrifuges (Models J2-MI, J6-MI, J2-MC, and J6-MC)*, above.

Table 3 Temperature Compensation Settings for J2 and J6 Series Centrifuges. Interpolate if intermediate values are required

Rotor Speed (rpm)	Required Sample Temperature (°C, green bar)						
	-20°	-10°	2°	5°	10°	20°	40°
10 000	N ^a	-3	-2	-1	0	+1	+2
8 000	-3	-2	-1 ^b	-1 ^b	0	+1	+2
5 000	-2	0	0	0	0	+1	+2

- a. "N" indicates that the rotor cannot achieve the required temperature at this speed.
- b. For the J2-HC centrifuge, use a setting of 0 instead of -1.

 Run Times

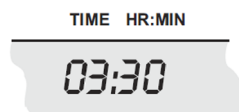

The *k* factor of the rotor is a measure of the rotor's pelleting efficiency. Beckman Coulter has calculated the *k* factors for all of its rotors, at maximum speed with full tubes, using the following formula.

$$k = \frac{\ln(r_{\max}/r_{\min})}{\omega^2} \times \frac{10^{13}}{3600} \quad \text{EQ 1}$$

where ω is the angular velocity of the rotor in radians per second ($\omega = 0.105 \times \text{RPM}$), r_{max} is the maximum radius, and r_{min} is the minimum radius.

After substitution:

$$k = \frac{(2.533 \times 10^{11}) \ln(r_{\text{max}}/r_{\text{min}})}{\text{rpm}^2} \quad \text{EQ 2}$$

In the JA-10 rotor, the k factor is 3610 for full 500-mL bottles at maximum speed.* For containers that nominally hold less than 500 mL, the k factors will be different. Calculate the k factors for these containers using equation EQ 2.

Use the k factor in the following equation to estimate the run time t (in hours) required to pellet particles of known sedimentation coefficient s (in Svedberg units, S).

$$t = \frac{k}{s} \quad \text{EQ 3}$$

For example, at 10 000 rpm *E. coli* ($s = 3600$ S) will pellet in

$$t = \frac{3610}{3600} \approx 1 \text{ hour} \quad \text{EQ 4}$$

 
Run times can be estimated for centrifugation at less than maximum speed by adjusting the k factor as follows:

$$k_{\text{adj}} = k_{\text{rated}} \left(\frac{10\,000}{\text{actual run speed}} \right)^2 \quad \text{EQ 5}$$

Run times can also be estimated from data established in prior experiments using a different rotor if the k factor of the previous rotor is known. For any two rotors, a and b,

$$\frac{t_a}{t_b} = \frac{k_a}{k_b} \quad \text{EQ 6}$$

Run Speeds

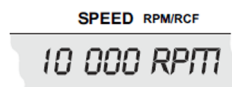

The centrifugal force at a given radius in a rotor is a function of speed. Comparisons of forces between different rotors are made by comparing the rotors' relative centrifugal fields (RCF). When rotational speed is adjusted so that identical samples are subjected to the same RCF in two different rotors, the samples are subjected to the same force. The RCF at a number of rotor speeds is provided in Table 4.

Do not select rotational speeds higher than the maximums you have determined to be appropriate for your protocols (in no case above 10 000 rpm or the limit shown in Table 2). In addition, when

* Based on sedimentation in water at 20°C.

centrifuging solutions more dense than 1.2 g/mL in this rotor, calculate the reduced maximum allowable rotor speed:

$$\text{reduced maximum speed} = (10\,000 \text{ RPM}) \sqrt{\frac{1.2 \text{ g/mL}}{\text{density of tube contents}}} \quad \text{EQ 7}$$


Note, however, that the use of this formula may still produce maximum speeds higher than the limitations imposed by the use of certain tubes or adapters (see [Table 2](#)). In such cases, use the lower of the two figures.

Table 4 Relative Centrifugal Fields for the JA-10 Rotor:

Entries in this table are calculated from the formula

$$\text{RCF} = 1.12r (\text{RPM}/1000)^2$$

Rotor Speed (rpm)	Relative Centrifugal Field ($\times g$)		
	At r_{\max} (158 mm)	At r_{av} (98 mm)	At r_{\min} (38 mm)
10 000	17 700	11 000	4 260
9 500	16 000	9 910	3 840
9 000	14 300	8 890	3 450
8 500	12 800	7 930	3 070
8 000	11 300	7 020	2 720
7 500	9 950	6 170	2 390
7 000	8 670	5 380	2 090
6 500	7 480	4 640	1 800
6 000	6 370	3 950	1 530
5 500	5 350	3 320	1 290
5 000	4 420	2 740	1 060
4 500	3 580	2 220	861
4 000	2 830	1 760	680
3 500	2 170	1 340	521
3 000	1 590	987	383
2 500	1 110	686	266
2 000	707	439	170
1 500	398	246	95
1 000	176	109	42

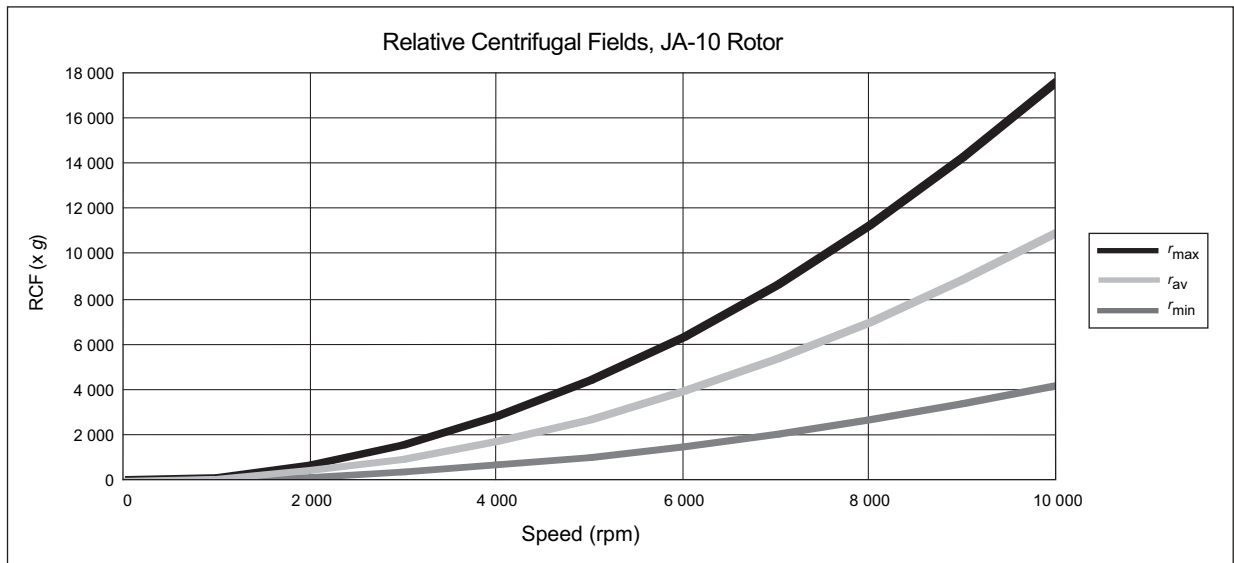


Care and Maintenance

Maintenance

NOTE Do not use sharp tools on the rotor that could cause scratches in the rotor surface. Corrosion begins in scratches and may open fissures in the rotor with continued use.

- Periodically (at least monthly) inspect the rotor, especially inside cavities, for rough spots or pitting, white powder deposits (frequently aluminum oxide), or heavy discoloration. If any of these signs are evident, do not run the rotor. Contact your Beckman Coulter representative for information about the Field Rotor Inspection Program and the rotor repair center.

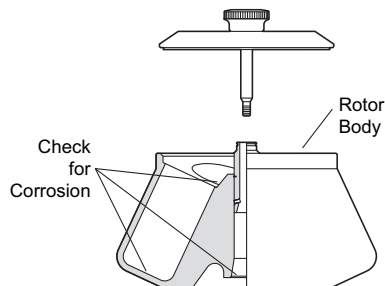

- Before using the rotor, inspect the rotor drive pins to ensure that they are not damaged. Damaged drive pins can prevent the rotor from seating properly on the centrifuge drive hub (Avanti J series centrifuges only). To inspect the drive pins, turn the rotor upside down and look into the drive hole in the center of the rotor. If the drive pins appear damaged, contact Beckman Coulter Field Service.
- Regularly lubricate the metal threads in the rotor with a thin, even coat of Spinkote lubricant (306812). Failure to keep these threads lubricated can result in damaged threads.

- Regularly apply silicone vacuum grease (335148) to the lid O-ring (870139) and rotor O-ring (811656). Replace O-rings about twice a year or whenever worn or damaged.
- Routinely apply Spinkote lubricant (306812) to the centrifuge drive spindle to prevent the rotor from sticking (not required on Avanti J series centrifuges).

Refer to Appendix A in *Rotors and Tubes* (JR-IM-10) for chemical compatibilities of rotor and accessory materials. Your Beckman Coulter representative provides contact with the Field Rotor Inspection Program and the rotor repair center.


Cleaning

Wash the rotor and rotor components immediately if salts or other corrosive materials are used or if spillage has occurred. Do not allow corrosive materials to dry on the rotor.

Under normal use, wash the rotor frequently (at least weekly) to prevent buildup of residues.

- 1 Remove the O-rings before washing.
- 2 Wash the rotor and lid in a mild detergent, such as Beckman Solution 555 (339555), that won't damage the rotor. The Rotor Cleaning Kit (339558) contains two special plastic-coated brushes and two quarts of Solution 555 for use with rotors and accessories. Dilute the detergent 10 to 1 with water.
NOTE Do not wash rotor components in a dishwasher. Do not soak in detergent solution for long periods, such as overnight.
- 3 Thoroughly rinse the cleaned rotor and components with distilled water.
- 4 Air-dry the rotor and lid upside down. *Do not use acetone to dry the rotor.*
- 5 Apply a thin, even coat of silicone vacuum grease to the lid O-ring before replacing it in the groove in the outer rim of the lid. Also apply silicone vacuum grease to the rotor O-ring before reassembly.

Clean metal threads every 6 months, or as necessary. Use a brush and concentrated Solution 555. Rinse and dry thoroughly, then lubricate lightly but evenly with Spinkote to coat all threads.

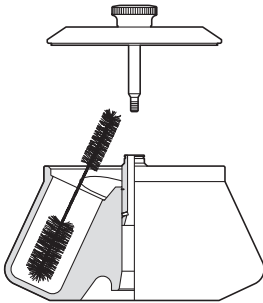

Periodically remove the O-rings and wipe clean as necessary. Clean the O-ring grooves with a cotton-tipped swab. Reapply a light film of silicone vacuum grease.

Decontamination



If the rotor (and/or accessories) becomes contaminated with radioactive material, it should be decontaminated using a solution that will not damage the anodized surfaces. Beckman Coulter has tested a number of solutions and found two that do not harm anodized aluminum: RadCon Surface Spray or IsoClean Solution (for soaking),* and Radiacwash.†

 
NOTE IsoClean can cause fading of colored anodized surfaces. Use it only when necessary and remove it promptly from surfaces.

While Beckman Coulter has tested these methods and found that they do not damage components, no guarantee of decontamination is expressed or implied. Consult your laboratory safety officer regarding the proper decontamination methods to use.



If the rotor or other components are contaminated with toxic or pathogenic materials, follow appropriate decontamination procedures as outlined by your laboratory safety officer.

Sterilization and Disinfection

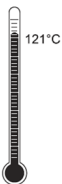

- The rotor and all rotor components can be autoclaved at 121°C for up to an hour. Remove the lid from the rotor and place the rotor and lid in the autoclave upside down.
- Ethanol (70%)‡ may be used on all rotor components, including those made of plastic. Bleach (sodium hypochlorite) may be used, but may cause discoloration of anodized surfaces. Use the minimum immersion time for each solution, per laboratory standards.

* In U.S., contact Nuclear Associates (New York); in Eastern Europe and Commonwealth States, contact Victoreen GmbH (Munich); in South Pacific, contact Gammasonics Pty. Ltd. (Australia); in Japan, contact Toyo Medic Co. Ltd. (Tokyo).

† In U.S., contact Biomed Medical Systems (Shirley, New York); internationally, contact the U.S. office to find the dealer closest to you.

‡ Flammability hazard. Do not use in or near operating centrifuges.

While Beckman Coulter has tested these methods and found that they do not damage the rotor or components, no guarantee of sterility or disinfection is expressed or implied. When sterilization or disinfection is a concern, consult your laboratory safety officer regarding proper methods to use.

Refer to publication IN-192, included in each box of tubes or bottles, for tube and bottle sterilization and disinfection procedures.

Storage

When the rotor is not in use, store it in a dry environment (not in the instrument) with the lid removed to allow air circulation so moisture will not collect in the tube cavities.

Returning a Rotor

The image shows a Return Goods Authorization (RGA) form. It includes a header with the title 'RGA' and a logo. Below the header, there are several sections with labels and input fields. The first section is for 'Customer Information' and includes fields for name, address, phone number, and fax number. The second section is for 'Product Information' and includes fields for product name, serial number, and quantity. The third section is for 'Return Information' and includes fields for reason for return, date of return, and return address. The form also has a section for 'Comments' and a signature line at the bottom.

Before returning a rotor or accessory for any reason, prior permission (a Returned Goods Authorization form) must be obtained from Beckman Coulter, Inc. This RGA form may be obtained from your local Beckman Coulter sales office. It should contain the following information:

- serial number,
- history of use (approximate frequency of use),
- reason for the return,
- original purchase order number, billing number, and shipping number, if possible,
- name and phone number of the person to be notified upon receipt of the rotor or accessory at the factory, and
- name and phone number of the person to be notified about repair costs, etc.

To protect our personnel, it is the customer's responsibility to ensure that the parts are free from pathogens and/or radioactivity. Sterilization and decontamination must be done before returning the parts. Smaller items (such as tubes, bottles, etc.) should be enclosed in a sealed plastic bag.

*All parts must be accompanied by a note, plainly visible on the outside of the box or bag, stating that they are safe to handle and that they are not contaminated with pathogens or radioactivity. **Failure to attach this notification will result in return or disposal of the items without review of the reported problem.***

Use the address label printed on the RGA form when mailing the rotor and/or accessories.

Customers located outside the United States should contact their local Beckman Coulter office.

Supply List

NOTE Publications referenced in this manual can be obtained by calling Beckman Coulter at 1-800-742-2345 in the United States, or by contacting your local Beckman Coulter office.

Contact Beckman Coulter Sales (1-800-742-2345 in the United States) or your local Beckman Coulter office, or see the *Beckman Coulter High Performance, High Speed, High Capacity Rotors, Tubes, and Accessories* catalog (BR-8102, available at www.beckman.com/techdocs) for detailed information on ordering parts and supplies. For your convenience, a partial list is given below.

Replacement Rotor Parts

JA-10 rotor assembly with magnets (rotors manufactured Jan. 2002 and later; cannot be used in J2/J6 series).....	369687
JA-10 rotor assembly (rotors manufactured through Dec. 2001)	334833
Lid assembly	392122
Lid O-ring (large)	870139
Rotor O-ring (small)	811656
Tie-down kit	364911

Other

Tubes, bottles, and accessories	see Table 2
Spinkote lubricant (2 oz).....	306812
Silicone vacuum grease (1 oz)	335148
Rotor Cleaning Kit	339558
Beckman Solution 555 (1 qt).....	339555
Rotor cleaning brush	339379
Rotor removal tool	334827

J Series Rotor Warranty

Subject to the conditions specified below and the warranty clause of the Beckman Coulter, Inc., terms and conditions of sale in effect at the time of sale, Beckman Coulter, Inc. agrees to correct either by repair, or, at its election, by replacement, any defects of material or workmanship which develop within seven (7) years after delivery of a J series rotor to the original buyer by Beckman Coulter, Inc. or by an authorized representative, provided that investigation and factory inspection by Beckman Coulter, Inc. discloses that such defect developed under normal and proper use. Should a Beckman Coulter centrifuge be damaged due to a failure of a rotor covered by this warranty, Beckman Coulter will supply free of charge all centrifuge parts required for repair.

REPLACEMENT

Any product claimed to be defective must, if requested by Beckman Coulter, Inc., be returned to the factory, transportation charges prepaid, and will be returned to Buyer with the transportation charges collect unless the product is found to be defective, in which case Beckman Coulter, Inc. will pay all transportation charges.

A defective rotor will be replaced by Beckman Coulter, Inc. at its then current list price less a credit based upon the age of the rotor (years since date of purchase). The Buyer shall not receive credit until the claimed defective rotor is returned to Beckman Coulter's Indianapolis, Indiana facility or delivered to a Beckman Field Service representative.

The replacement price (cost to Buyer) for the respective rotor shall be calculated as follows:

Replacement price = Current rotor list price × years/7

Conditions

1. Except as otherwise specifically provided herein, this warranty covers the rotor only and Beckman Coulter, Inc. shall not be liable for damage to accessories or ancillary supplies including but not limited to (i) tubes, (ii) tube caps, (iii) tube adapters, or (iv) tube contents.
2. This warranty is void if the rotor has been subjected to customer misuse such as operation or maintenance contrary to the instructions in the Beckman Coulter rotor or centrifuge manual.
3. This warranty is void if the rotor is operated with a rotor drive unit or in a centrifuge unmatched to the rotor characteristics, or is operated in a Beckman Coulter centrifuge that has been improperly disassembled, repaired, or modified.

Disclaimer

IT IS EXPRESSLY AGREED THAT THE ABOVE WARRANTY SHALL BE IN LIEU OF ALL WARRANTIES OF FITNESS AND OF THE WARRANTY OF MERCHANTABILITY AND THAT BECKMAN COULTER, INC. SHALL HAVE NO LIABILITY FOR SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND WHATSOEVER ARISING OUT OF THE MANUFACTURE, USE, SALE, HANDLING, REPAIR, MAINTENANCE, OR REPLACEMENT OF THE PRODUCT.

Related Documents

Beckman Coulter High Performance, High Speed, High Capacity Rotors, Tubes, and Accessories catalog

PN BR-8102

Rotors and Tubes

PN JR-IM-10

www.beckman.com

